


With an 8mm drill bit, drill four clearance holes right through braces and legs. Drill on diagonals, as shown.



Drop coach bolts through holes, turn legs over, attach washers and nuts. Tighten with a spanner. Repeat for other legs.

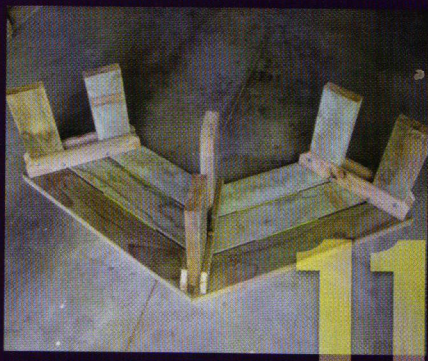

Lay two sides of your seat on ground upside down, with spacers in between. Stand legs on top, directly over joints.



Drive screws diagonally through legs and into the underside of seat. Repeat steps 11 & 12 to make up another section.



Carefully stand upright (they're not properly secured yet). Mark a screw line at centre of braces. Screw boards in place.



With the two sections complete, check that the remaining boards sit firmly in place. Don't fix yet. Sand and stain seat.



Place the completed sections around your tree. The ground in the root area may be hard and uneven, so adjust leg heights to suit.



Once level, adjust seat sections so they're one seat board length apart. Drop in remaining planks and secure with screws.